


Разъем Pioneer KEH-1300

Описание:

Разъем для Pioneer KEH-1300

Применяется для подключения акустики, питания и управляющих проводов к автомагнитоле: PEONEER KEH-1100 KEH-1700 KEH-2730 R KEH-P-3630 R; KEH-1150; KEH-1730; KEH-3520; KEH-P-4300; KEH-1200; KEH-1800; KEH-3700; KEH-P-4400; KEH-1300; KEH-1830 R; KEH-3710; KEH-P-4500; KEH-1300 K; KEH-2100; KEH-3720; KEH-P-4530; KEH-1300; SDK KEH-2300; KEH-3730; KEH-P-4600; KEH-1311; KEH-2400; KEH-5700; KEH-P-4700; KEH-1400; KEH-2520; KEH-5730 R; KEH-P-4730 R; KEH-1450; KEH-2700; KEH-P-3300; KEH-P-5700 R; KEH-1500; KEH2710; KEH-P-3400; KEH-1530; KEH-2720; KEH-P-3600.

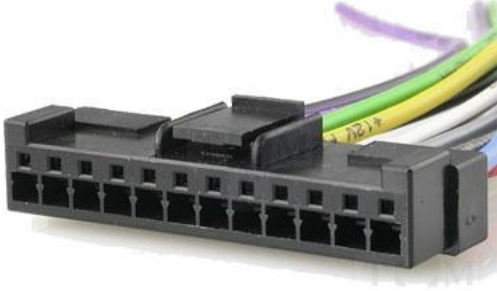

| Цвет провода | Описание | |
|------------------------|--|---------------------------|
| Red | To electric terminal controlled by ignition switch (12 V DC) ON/OFF. | |
| Black (chassis ground) | To vehicle (metal) body. | |
| Yellow/black | If you use a cellular telephone, connect it via the Audio Mute lead on the cellular telephone. If not, keep the Audio Mute lead free of any connections. | |
| Orange | To terminal always supplied with power regardless of ignition switch position. | |
| Blue | To system control terminal of the power amp. (Max. 300 mA 12 V DC.) | |
| Green (+) | Left | Front speaker |
| Green/black (-) | | Rear speaker or Not used |
| Green/red (+) | | |
| Black/green (-) | | |
| Gray (+) | Right | Front speaker |
| Gray/black (-) | | Rear speaker or Subwoofer |
| Gray/red (+) | | |
| Black/gray (-) | | |